Liftgate Lock Cylinder — Wagon (416640)

Removal

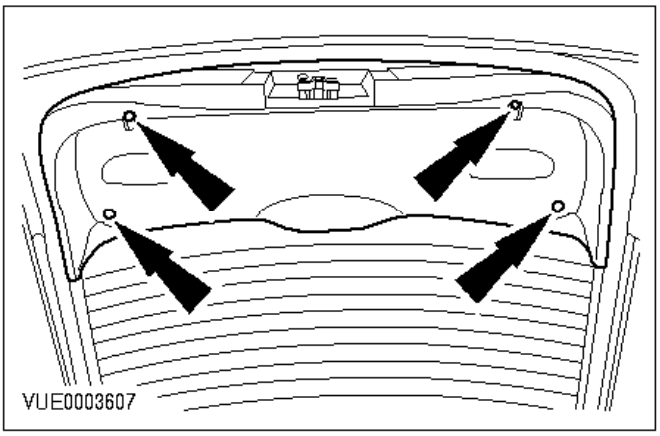

1. Remove the liftgate trim panel.

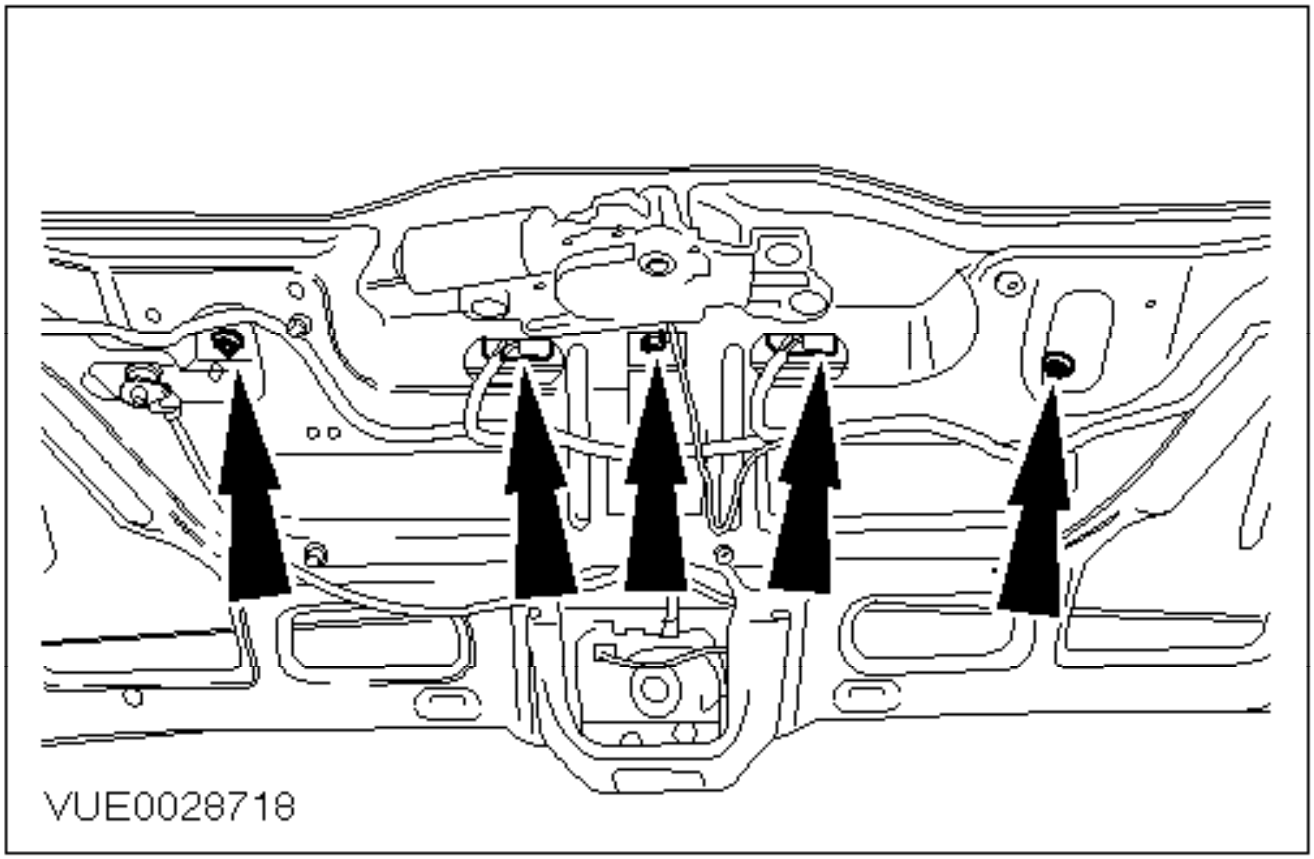

2. Remove the exterior trim moulding and license plate lamps.
   - Remove the retaining screws.
   - Disconnect the license plate lamp electrical connectors.

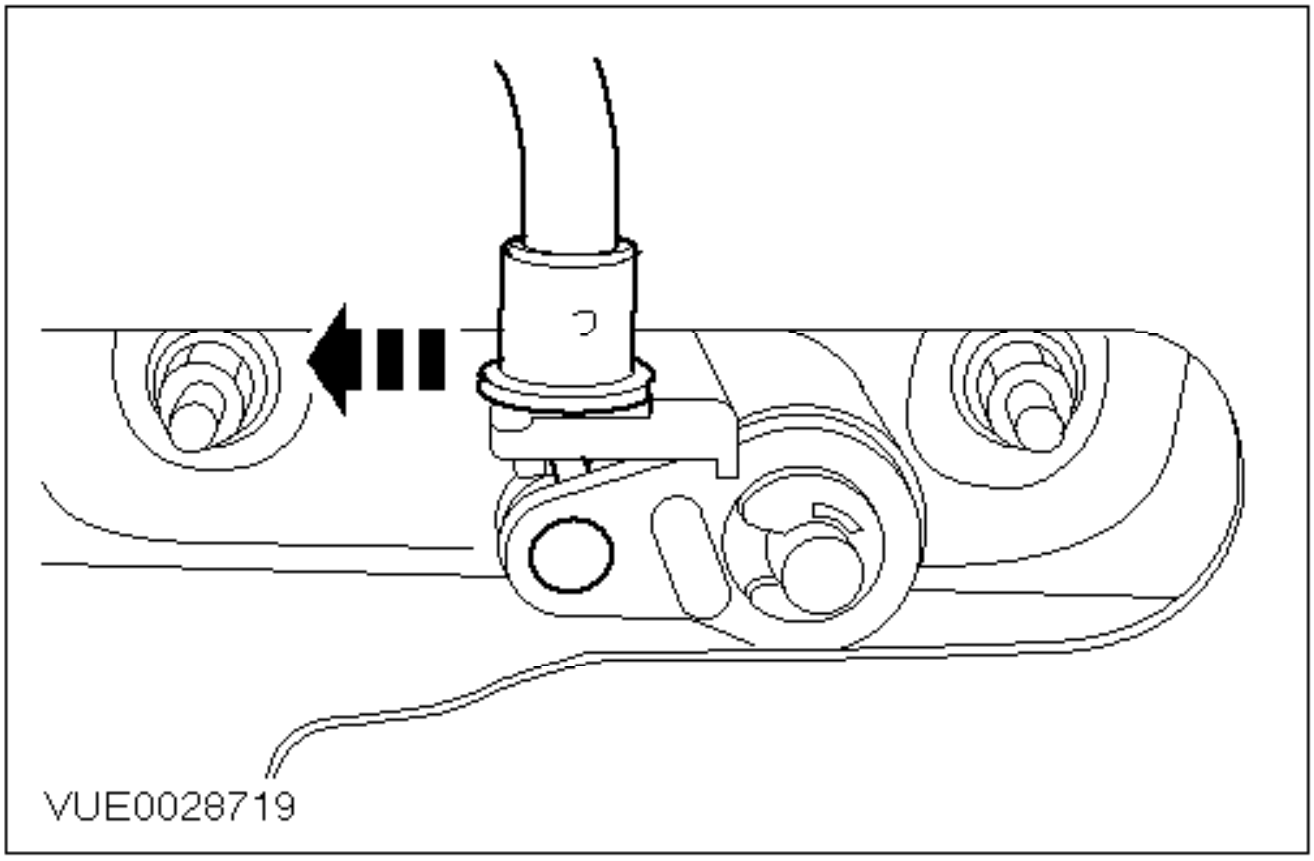

3. Disconnect the liftgate latch cable from the liftgate lock assembly.

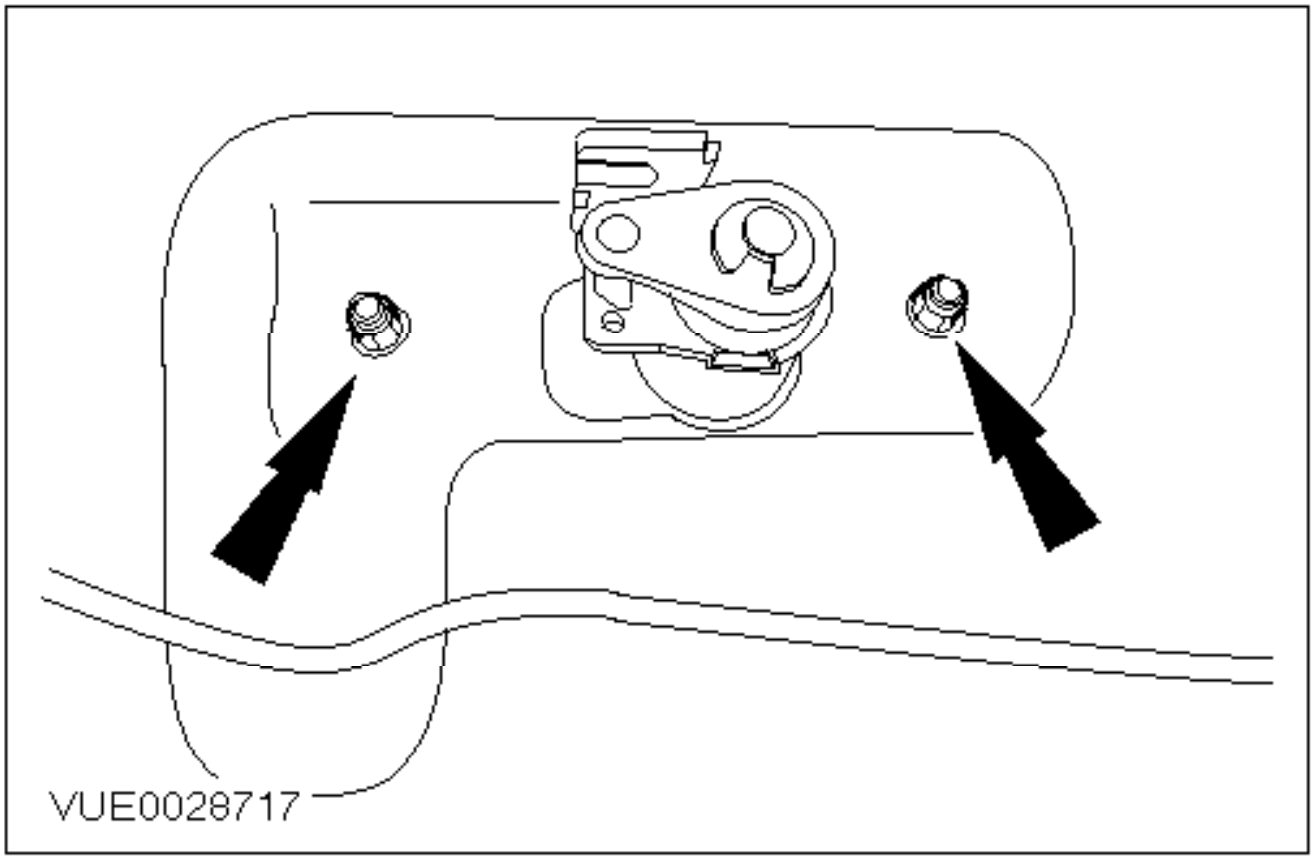

4. Remove the liftgate lock assembly.

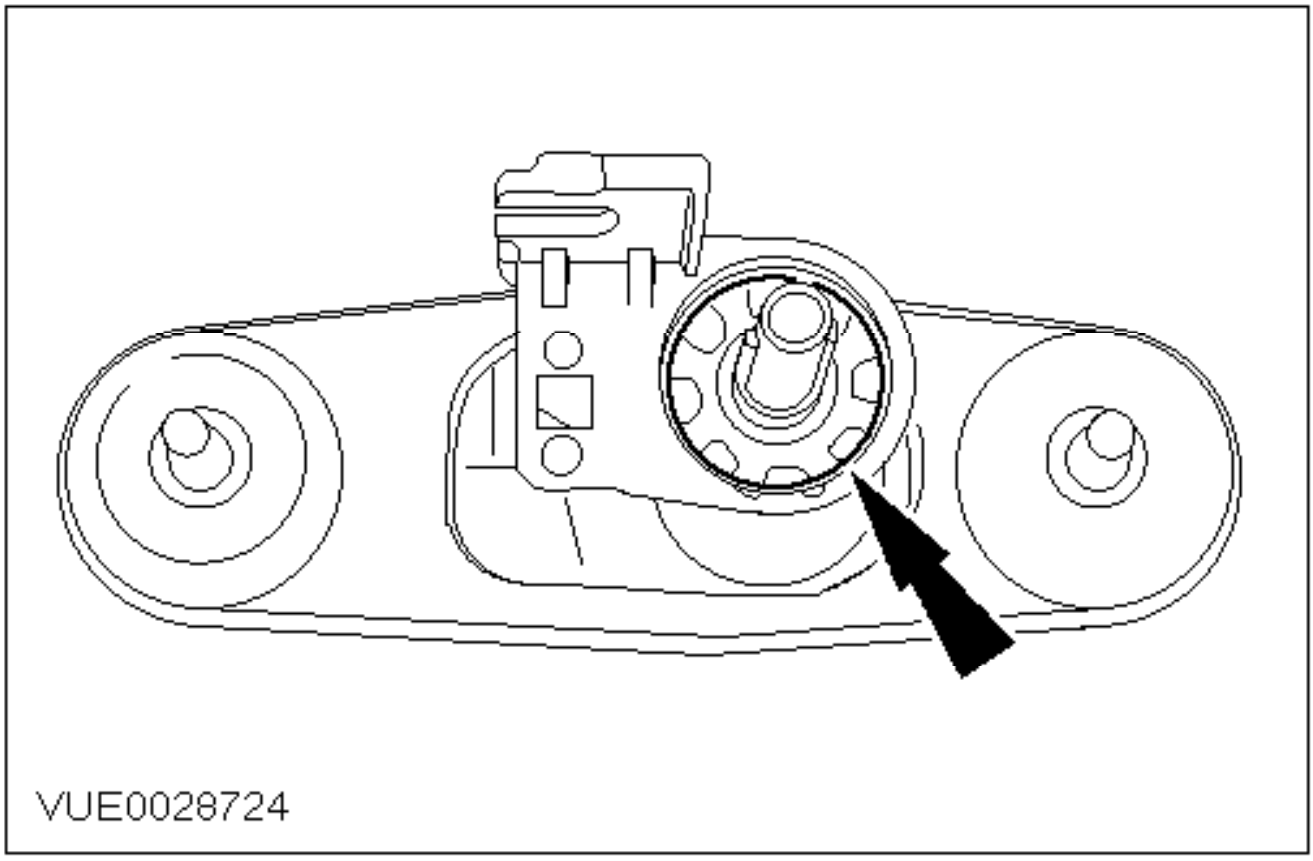

5. Remove the liftgate lock cylinder retaining ring.
   - Fold the tabs inwards.

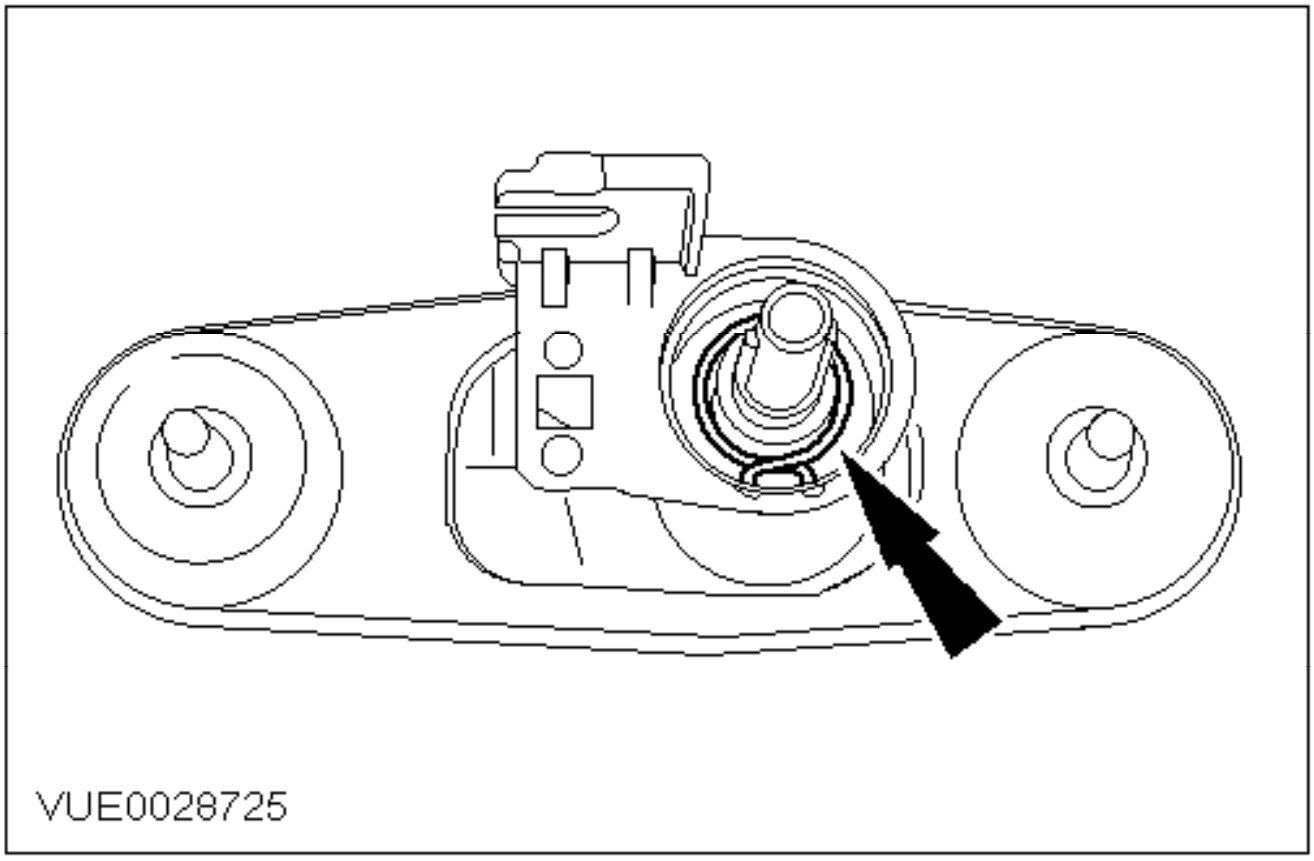

6. Remove the liftgate lock cylinder spring.

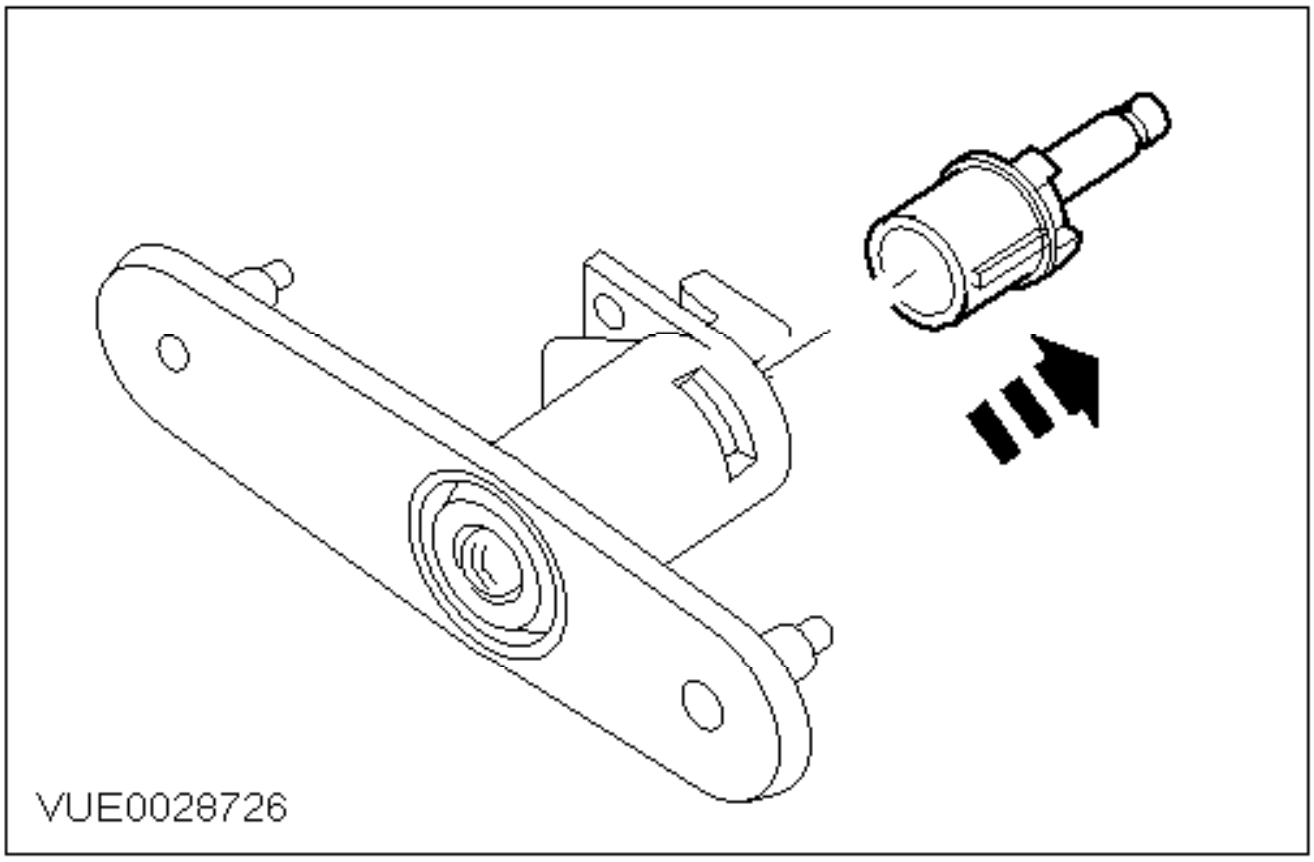

7. Remove the liftgate lock cylinder.

Installation

1. To install, reverse the removal procedure.